

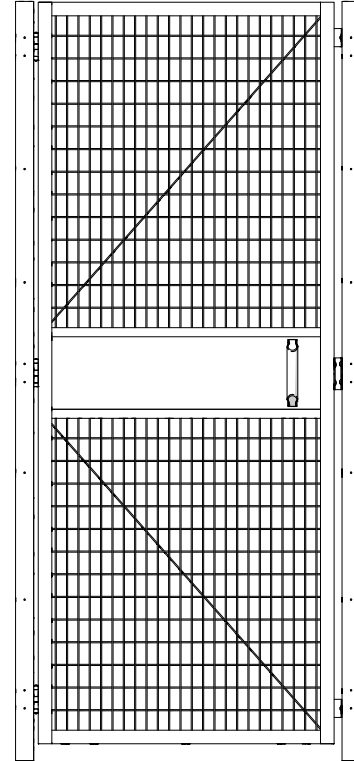


8900 North Arbon Drive
Milwaukee, WI 53223, USA
P: 800-553-5560, 414-355-2600
F: 563-589-2776
E: safetyinfo@ritehite.com

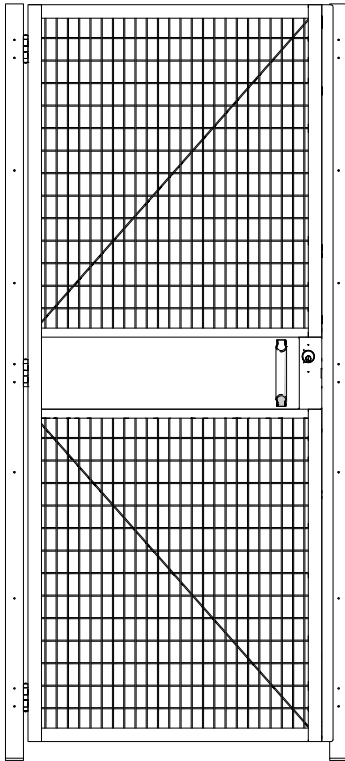

TOOLS REQUIRED:

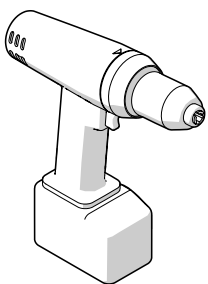


BATTERY DRILL




5/16"
[8mm]

+

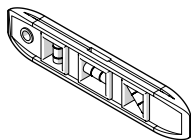


LEVEL

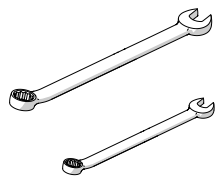

OPEN END WRENCH


9/16"
[15mm]

7/16"
[11mm]

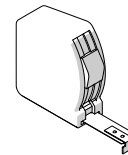

MEASURING TAPE

7/16"
[11mm]




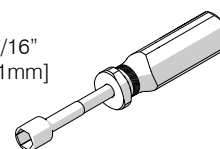


SOCKET DRIVER



PHILLIPS HEAD
SCREWDRIVER

HARDWARE PROVIDED:

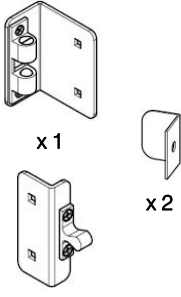
KT300 x 1	 x 3	 x 6	 x 6	
KT6014 x 1	 x 1		 x 2	
KT236 x 1	 x 1 x 2 x 1	 x 4	 x 2	SNAP LOCK DOOR
		 x 4	 x 2	
			 x 2	
KT237 x 1	 x 1	 x 2	 x 4	CYLINDER LOCK DOOR
		 x 2	 x 4	
			 x 4	
KT063 x 1	 x 4	 x 4		TRANSOM KIT

HARDWARE LIST:

- (D) 1/4"-20 x 1/2" SQUARE NECK CARRIAGE BOLT
- (G) M8-1.25 x 20 HEX HEAD BOLT
- (H) #12-14 x 1" HEX HEAD SELF-DRILLING SCREW
- (J) 1/4" LOCK WASHER
- (K) 1/4"-20 FLANGE NUT
- (CD) 14-10 x 1" PHILLIPS TRUSS HEAD SHEET METAL SCREW


1

	A (OPENING)
RG-H34XX-X	34" [864mm]
RG-H46XX-X	46" [1168mm]
RG-H58XX-X	58" [1473mm]

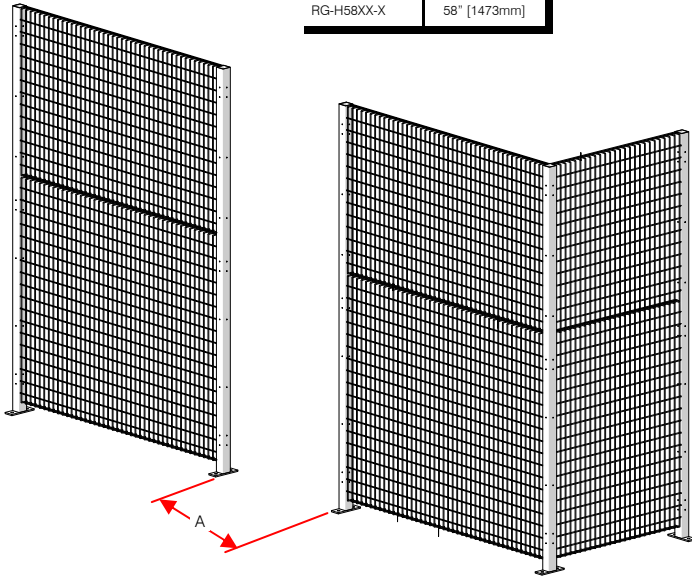


2

HEADER BAR INSTALLATION (7'-0" O.A.H. GUARDING OR SHORTER)

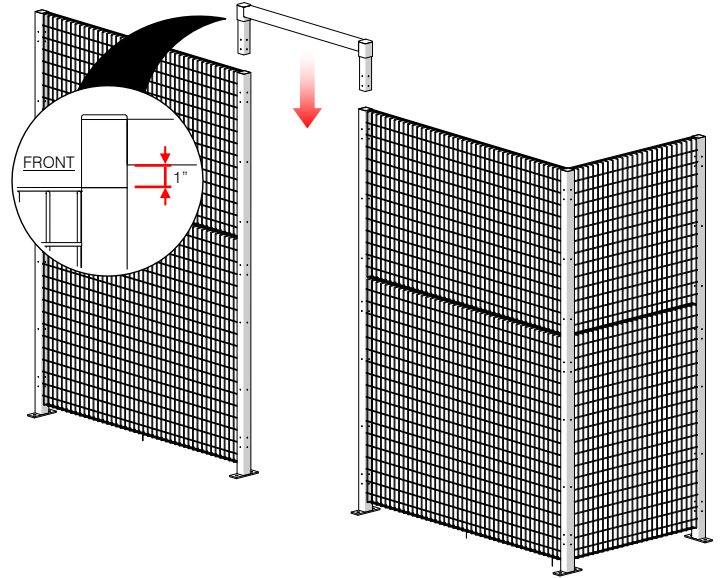


3

TRANSOM INSTALLATION (8'-0" HIGH GUARDING OR TALLER)

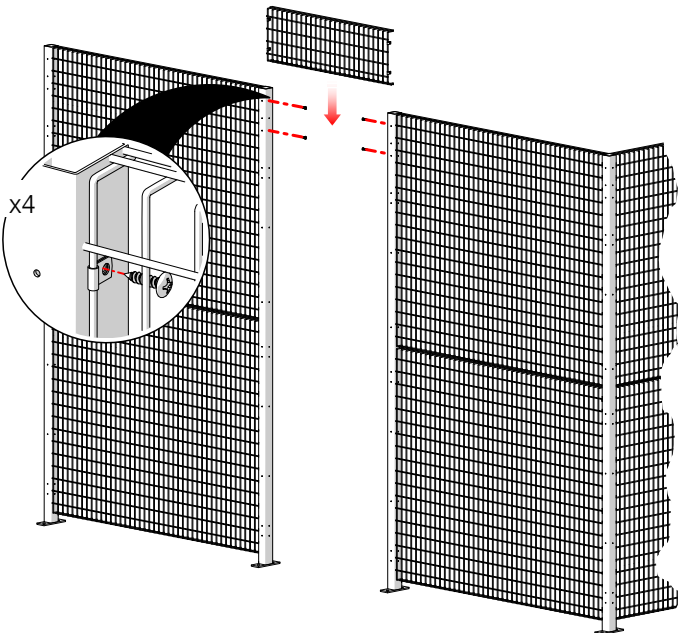


4


	# OF HINGES
RG-HXX58-X	2
RG-HXX72-X	2
RG-HXX82-X	3

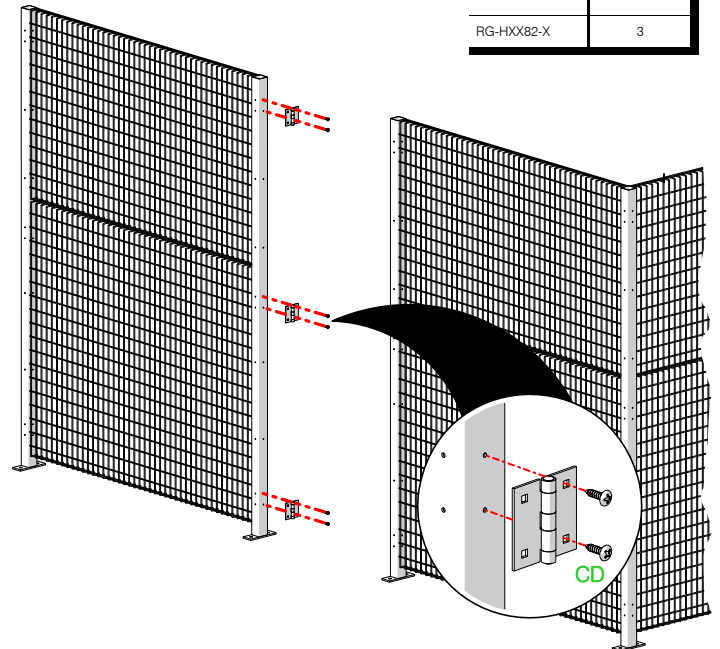

5

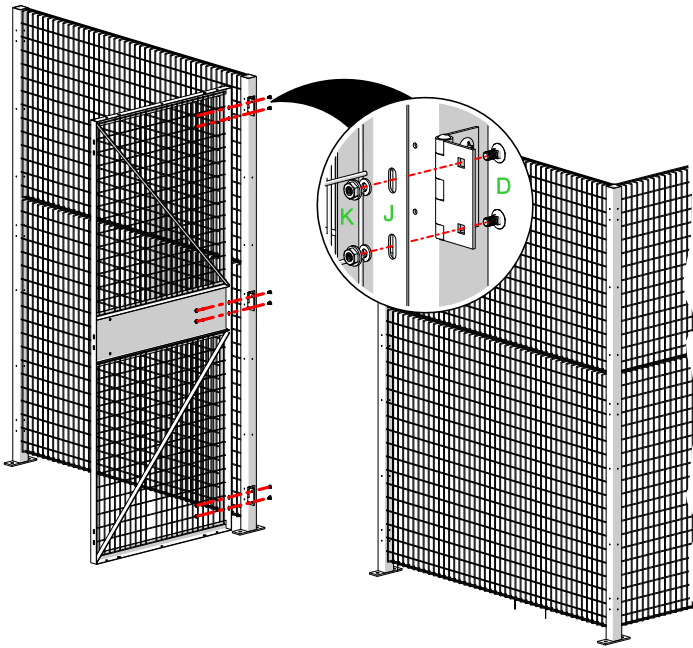


6

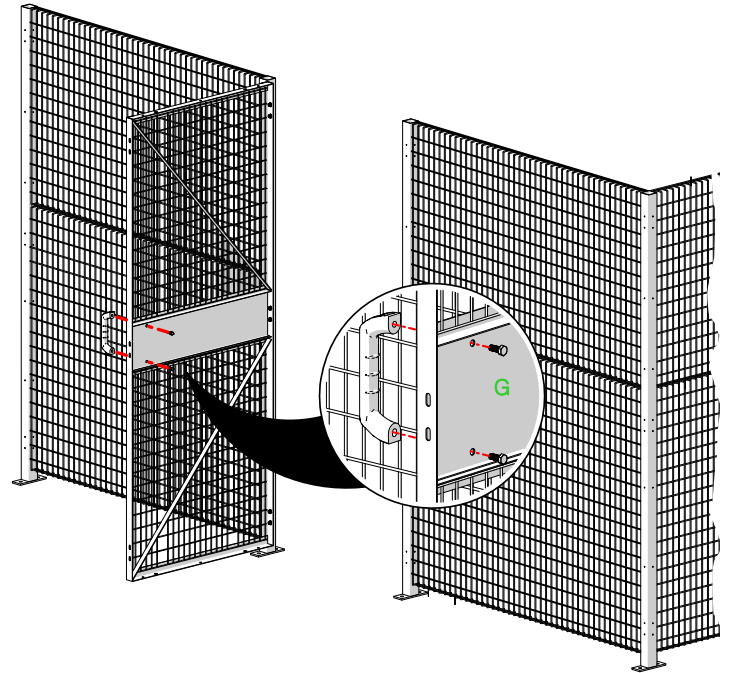


7


SNAP LOCK INSTALLATION (SKIP TO STEP 10 FOR CYLINDER LOCK INSTALLATION)

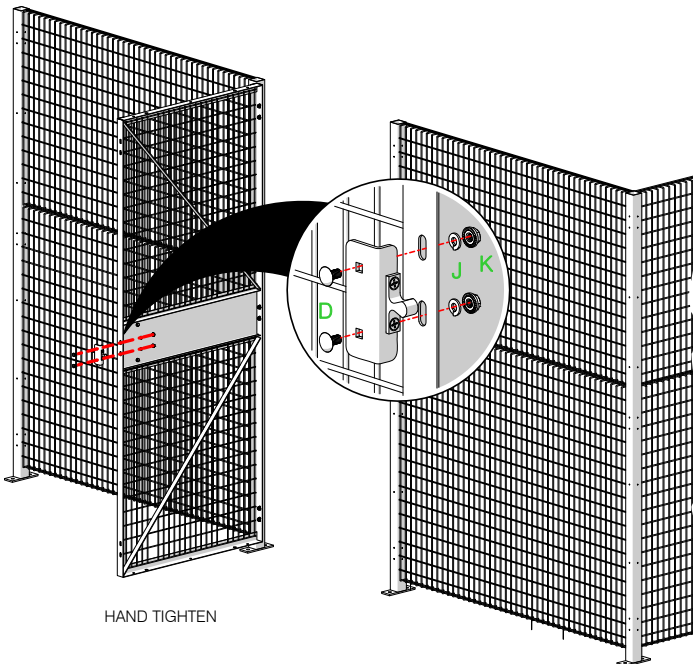

8

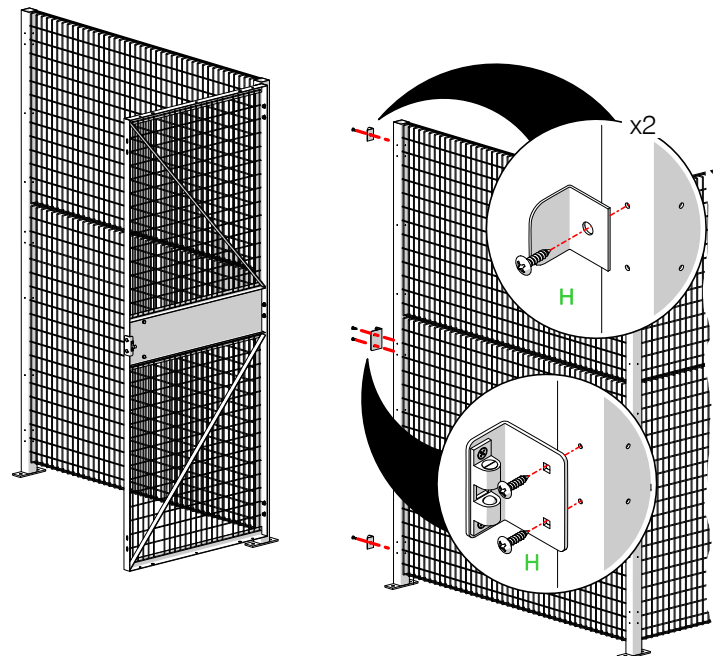


9

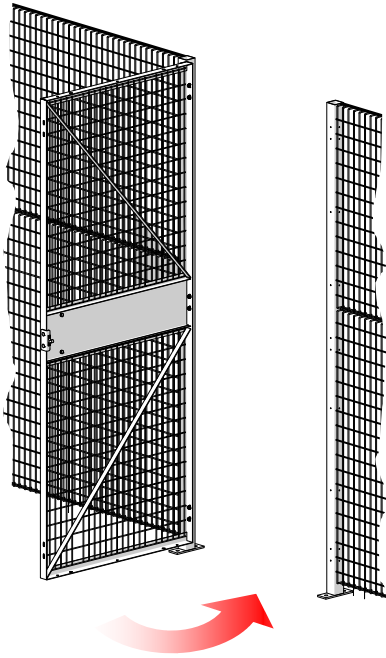


CHECK ALIGNMENT &
TIGHTEN ALL HARDWARE

10

CYLINDER LOCK INSTALLATION
(STEPS 10 THRU 12 ARE FOR CYLINDER LOCK
INSTALLATION ONLY)

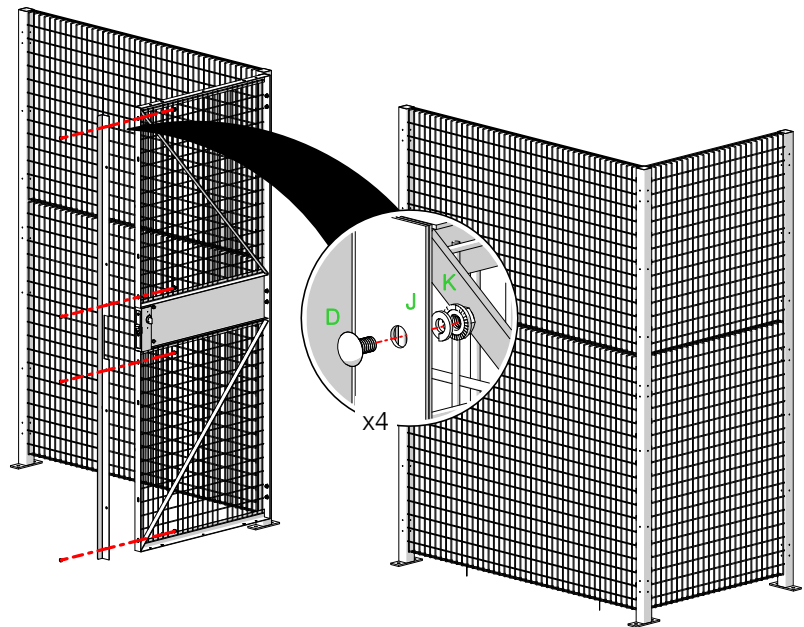


11

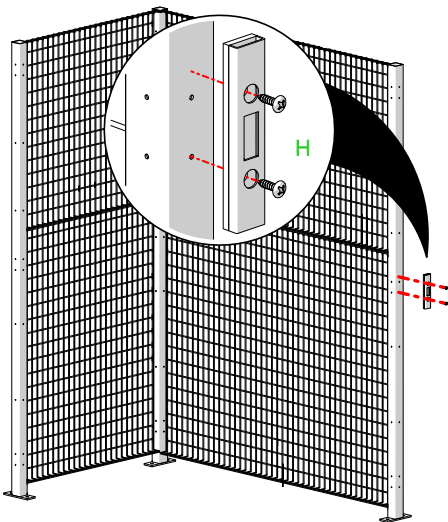

INSIDE VIEW

12

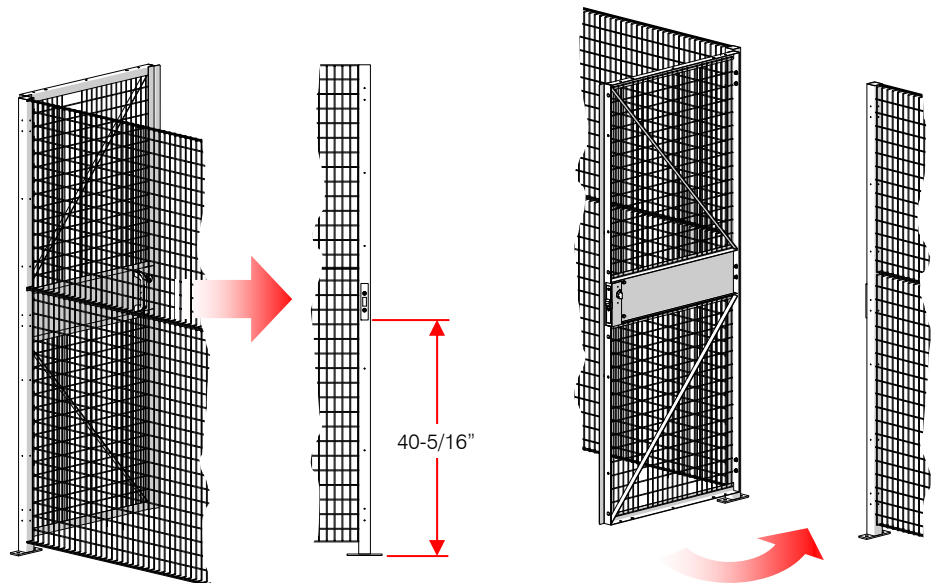

CHECK ALIGNMENT &
TIGHTEN ALL HARDWARE