




8900 North Arbon Drive
Milwaukee, WI 53223, USA
P: 800-553-5560, 414-355-2600
F: 563-589-2776
E: safetyinfo@ritehite.com

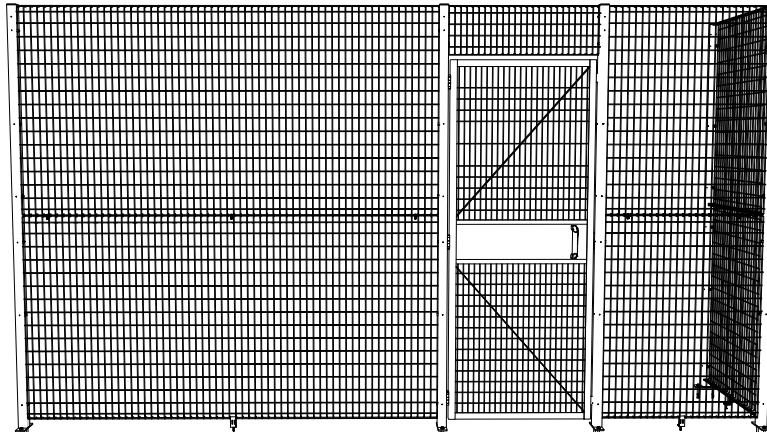

TOOLS REQUIRED:

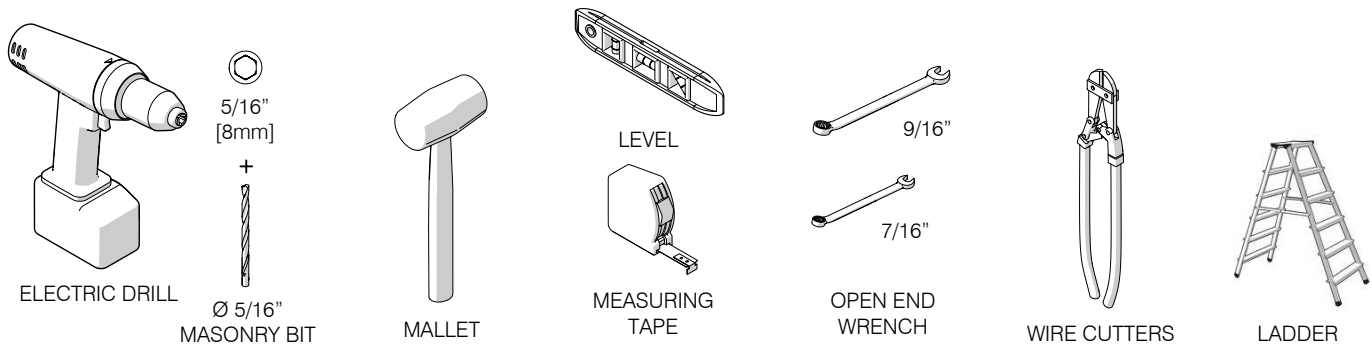





HARDWARE PROVIDED:

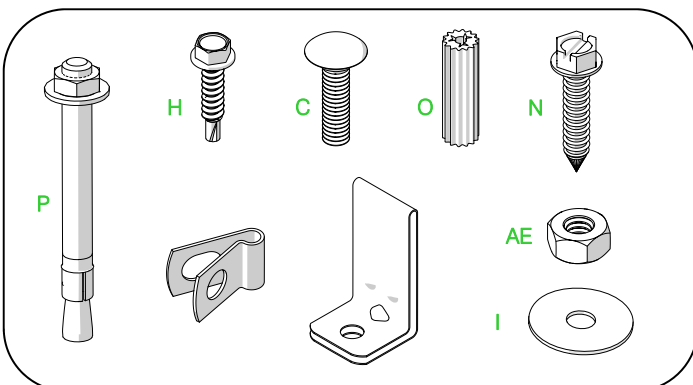


HARDWARE LIST:

- (C) 1/4"-20 x 1" SQUARE NECK CARRIAGE BOLT
- (H) #12-14 x 1" HEX HEAD SELF-DRILLING SCREW
- (I) 1/4" FLAT WASHER
- (N) #14-10 x 1-1/4" SLOTTED HEX HEAD SMS
- (O) #14 x 1" TUBULAR PLASTIC ANCHOR
- (P) 3/8" x 3-3/4" WEDGE ANCHOR
- (AE) 1/4"-20 HEX NUT



1

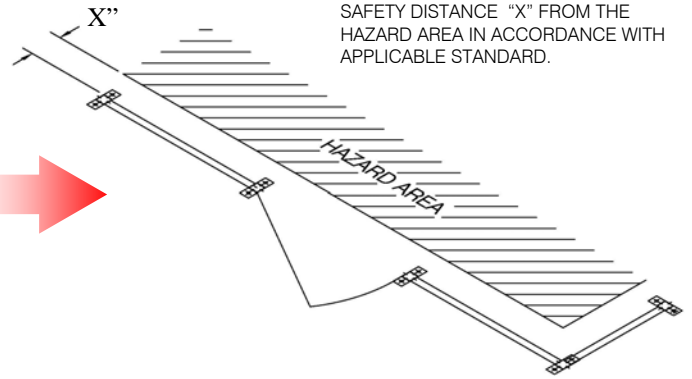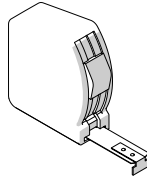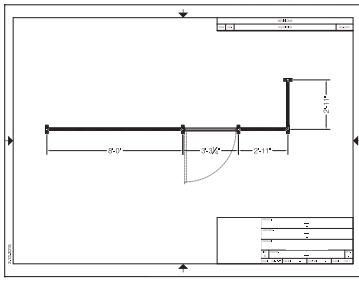



2

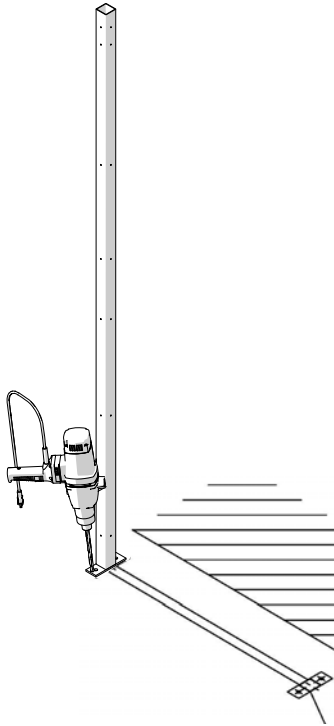


3

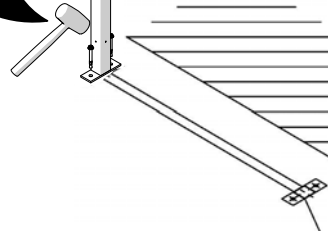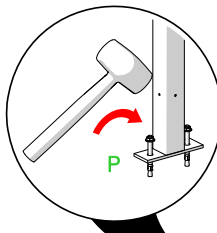

4



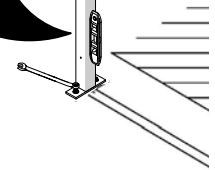
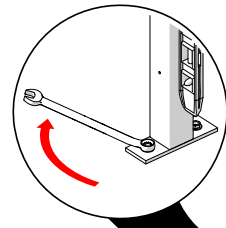


5

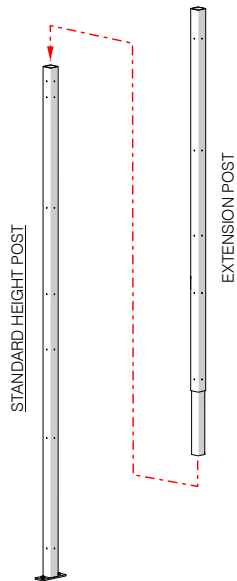


NOTE: STEP 5 IS FOR PARTITION
TALLER THAN 12'-0" HIGH ONLY

6

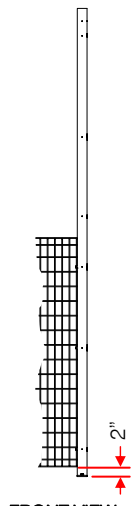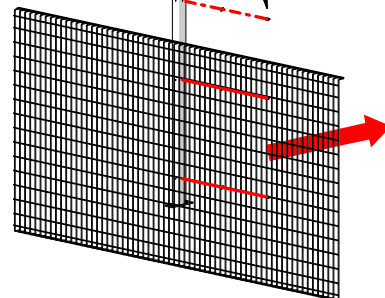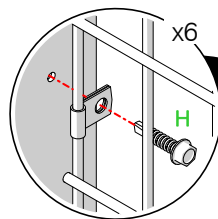


FRONT VIEW


7

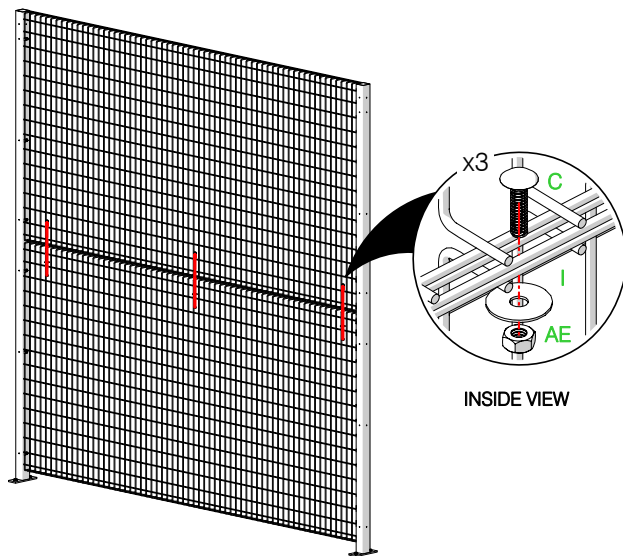


8

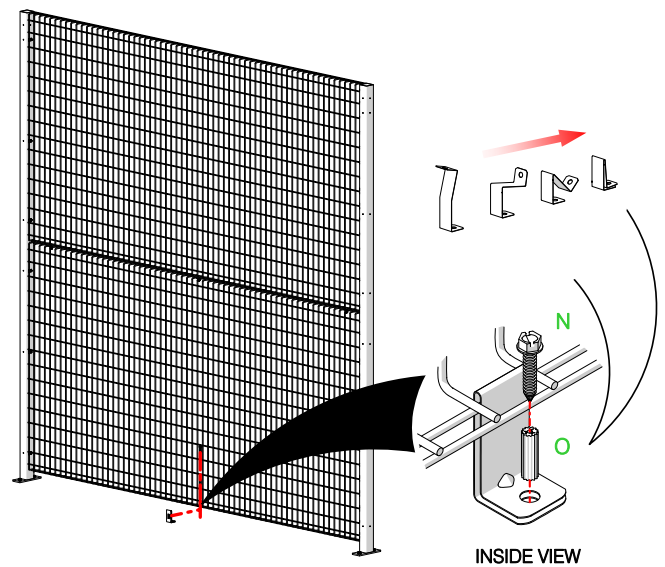

9

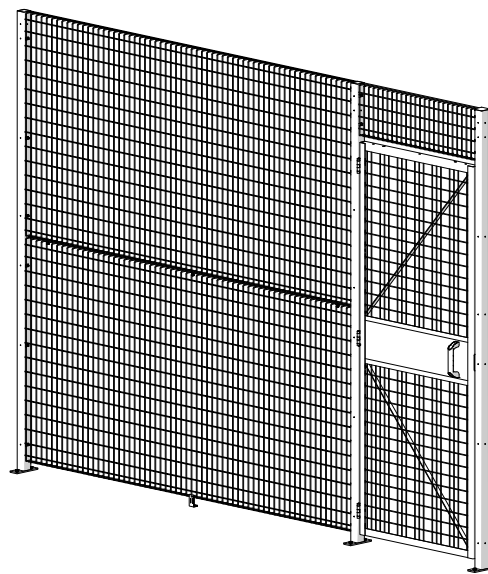


NOTE: IF INSTALLING DOOR, REFER TO DOOR ASSEMBLY INSTRUCTIONS PRIOR TO INSTALL.

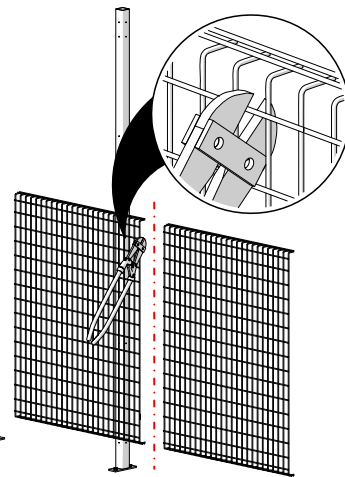

10

POST CAP INSTALLATION
(7'-0" O.A.H. GUARDING OR SHORTER)

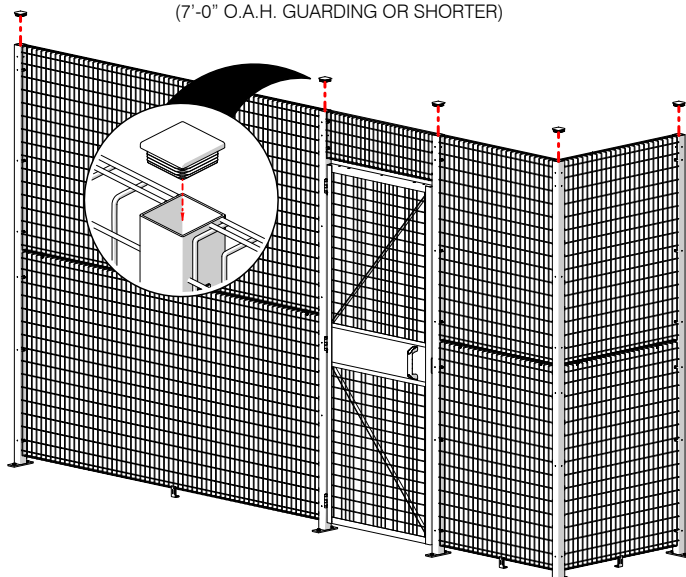

11

CAPPING CHANNEL INSTALLATION
(8'-0" HIGH GUARDING OR TALLER)

